

****Mandatory Vehicle Setup Item****

Enclosed with the 2014 600R IQ is a taillight relocation bracket that must be installed prior to vehicle operation. This bracket is **mandatory** for ISR-sanctioned racing and will be a tech inspection item. It is also required for SSCC compliance.

Kit Includes

- 1x Relocation Bracket
- 1x Zip Tie
- 4x 7518905 Torx Screw
- 4x 7542153 Nylock Nut
- 4x 7556145 Washer

Instructions:

1. Remove seat from vehicle (2 bolts in front of tunnel, 4 bolts underneath tunnel) and disconnect taillight wire.
2. Remove taillight from seat base (2 nuts, SAVE).
3. Install taillight on relocation bracket using existing mount nuts for seat base. Orientation must match Fig. 1 to ensure proper wire routing.
4. Install seat bracket using existing taillight mount holes. Two additional holes need to be drilled to clear two additional $\frac{1}{4}$ " fasteners (see Fig. 2). Route wire through existing hole.
5. Fasten taillight bracket to seat using torx bolts, nuts and washers (see Fig. 3).
6. Plug taillight harness into taillight. Use zip-tie to ensure connection (see Fig. 4).
7. Mount seat in reverse order using existing fasteners.

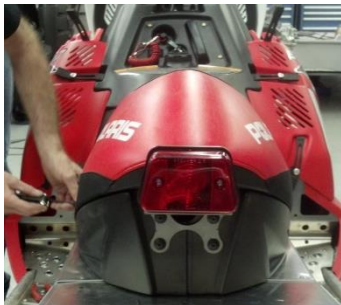


Fig. 1

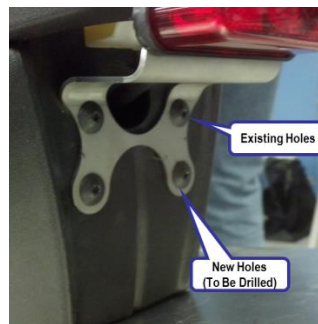


Fig. 2



Fig. 3

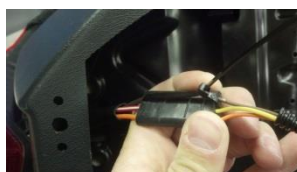


Fig. 4